

INSTRUCTIONS FOR INSTALLING HEAVY DUTY CYLINDRICAL BORED LOCK

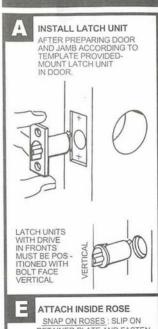

REMOVE INSIDE KNOB OR HANDLE*

IF RECEIVED WITH KNOB OR HANDLE ENGAGED DEPRESS KNOB CATCH WITH TOOL PROVIDED AND PULL KNOB OR HANDLE OFF SPINDLE. KNOB TRIM ILLUSTRATED

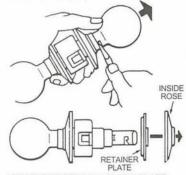

 
REMOVE ROSE AND RETAINER PLATE

NOTE: LOCKS WITH THREADED INSIDE ROSES DO NOT HAVE RETAINER PLATES. UNSCREW TO REMOVE.

ADJUST FOR DOOR THICKNESS


ROTATE OUTSIDE ROSE IN OR OUT DEPENDING ON DOOR THICKNESS LOCK WILL FIT ANY DOOR FROM 13/8' TO 2'

1/8" GAP FOR 1-3/8" DOORS 1/4" GAP FOR 1-3/4" DOORS 3/8" GAP FOR 2" DOORS




INSTALL LOCK UNIT* D)

INSTALL LOCK UNIT*
LOCK UNIT HOUSING MUST ENGAGE
LATCH UNIT PRONGS AND RETRACTOR
MUST ENGAGE LATCH TAILPIECE.
NOTE: IF GUARD BOLT FUNCTION IS
INSTALLED. DO NOT ATTEMPT TO MOUNT
LOCK UNIT WHEN DOOR IS CLOSED.
GUARD BOLT TAILPIECE WILL
INTERFERE. NOTE: DEPRESS LATCH BOLT
SLIGHTLY TO ALLOW RETRACTOR TO
ENGAGE LATCH TAILPIECE.

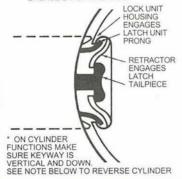


RETAINER PLATE AND FASTEN WITH TWO MACHINE SCREWS. POSITION SPRING CLIP NOTCH AND SNAP ROSE OVER RETAINER PLATE.

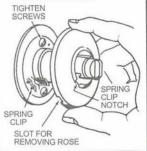

THREADED TYPE ROSES:
SLIP ROSE OVER SPINDLE
AND SCREW DOWN FIRMLY
USING TRIM WRENCH PROVIDED

REPLACE INSIDE KNOB OR HANDLE

LINE UP SLOT IN KNOB LINE UP SLOT IN KNOB WITH KNOB CATCH IN SPINDLE. SLIDE KNOB OR HANDLE ON TO SPINDLE. DEPRESS KNOB CATCH AND PUSH KNOB OR HANDLE INTO ENGAGED POSITION. NOTE: B KNOB BUTTON SETS SHOULD BE IN THE UNLOCKED POSITION WHEN REPLACING THE INSIDE KNOB OR HANDLE

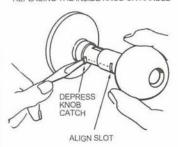

NOTE: WHEN A CYLINDER FUNCTION LOCK IS CORRECTLY INSTALLED, THE KEY SHOULD ENTER IN THIS POSITION.

NOT, REVERSE CYLINDER AS FOLLOWS: 1. WITH INSIDE KNOB UNLOCKED, INSERT A KEY

INTO CYLINDER. TURN KEY ABOUT 45" DEGREE.

PRESS RETAINER THRU SLEEVE HOLE BY USING TOOL PROVIDED AND PULL KNOB OUT.
 TURN LOCKSET TO OPPOSITE SIDE WHERE

YOU WISH TO REVERSE.

5. PUT OUTSIDE KNOB WITH KEY-IN-CYLINDER BACK INTO SPINDLE UNTIL TAIL-PIECE CAN ENGAGE RETRACTOR

ENGAGE RETRACTOR
(FEEL RETRACTS BY TURNING KEY SLIGHTLY)
TURN KEY ABOUT 45° DEGREE
AND PUSH KNOB IN UNTIL RETAINER
CLICKS INTO POSITION.


*TURN LOCKSET TO

OPPOSITE SIDE WHERE YOU WISH TO REVERSE.

*OUTSIDE KNOB & CYLINDER ALWAYS BEING IN THIS POSITION


SEE REVERSE SIDE FOR CYLINDER KNOB ASSEMBLY

CYLINDER REASSEMBLY

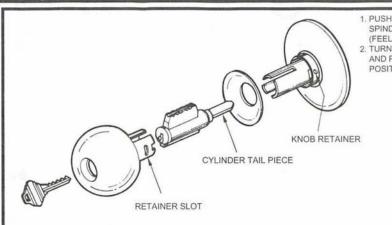

- PUSH KNOB WITH KEY IN CYLINDER BACK INTO SPINDLE UNTIL TAIL - PIECE CAN ENGAGE RETRACTOR (FEEL RETRACTS BY TURNING KEY SLIGHTLY)
- TURN KEY ABOUT 45" DEGREE
 AND PUSH KNOB IN UNTIL BETAINER CLICKS INTO POSITION.


CAUTION FOR CLASSROOM FUNCTION

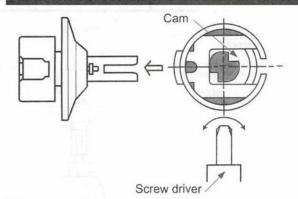

(1) Locking Turn key counter-clockwise. Return to take a key out. (2) Unlocking: Turn key clockwise. Return to take a key out.

Make sure to turn cam counter clockwise with a screw driver as far as it will go before reassembling of cylinder to prevent mis-positioning of cam for classroom function.

INTERCHANGEABLE CORE HOW TO REPLACE

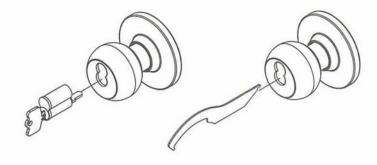


HOW TO REPLACE CORE:

With control key fully inserted, Insert core into knob. Turn control key to the right, then return key to vertical and remove from core.


HOW TO REMOVE KNOB:

Inseret a pin through cylinder chamber of knob.


Press down knob catch (retainer spring) and pull knob out.

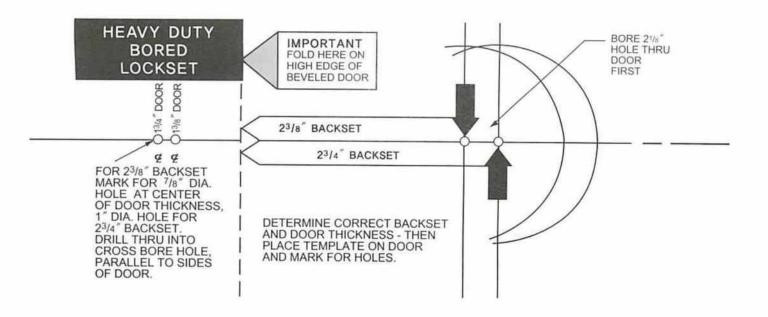


TO MORTISE DOOR FOR LOCK

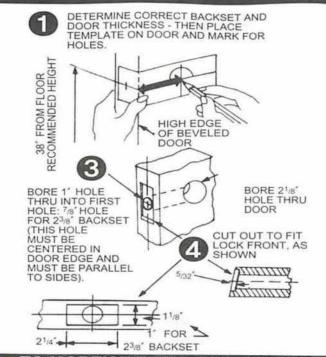

TO MORTISE FRAME FOR STRIKE

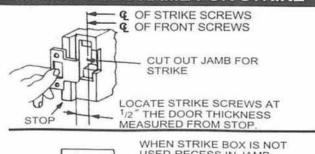

 

WHEN STRIKE BOX IS NOT USED-RECESS IN JAMB MUST BE DEEP ENOUGH TO ALLOW LATCH BOLT TO EXTEND ITS FULL FREE LENGTH.

GUARD BOLT STOPS ON STRIKE WHEN DOOR IS CLOSED.