



3. Carefully install housing
to prevent cross threading.
(As shown in Figure 3)
Do not overtighten housing
as this may inhibit proper
function.

4. Remove cylinder wrench and tighten set clockwise.(As shown in Figure 4)This ensures a safe operating assembly.