


PARTS LIST 9500/F9500 SERIES MORTISE EXIT DEVICE

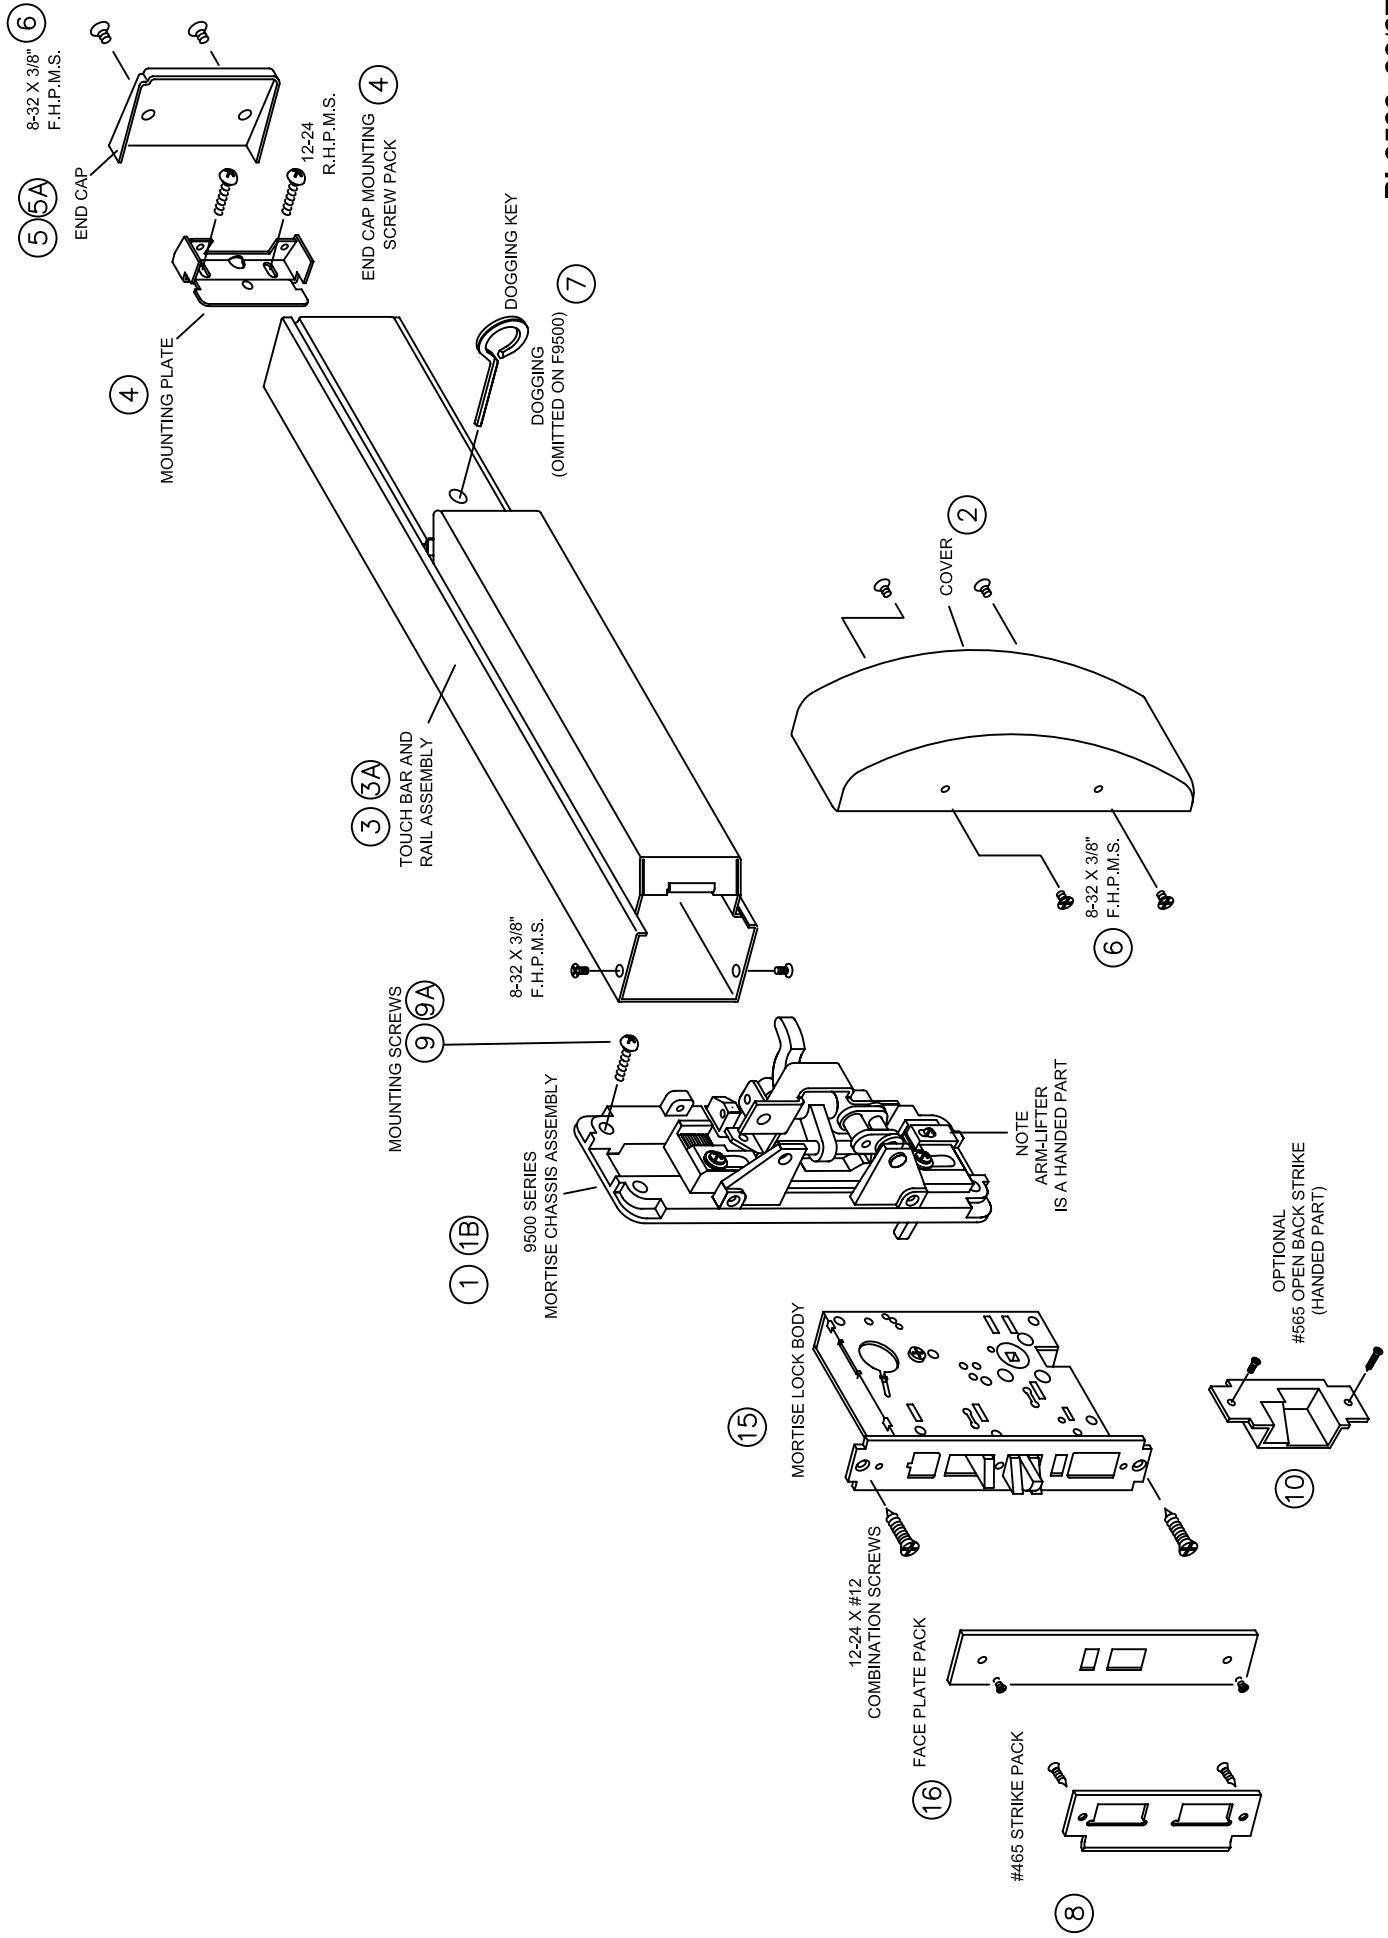

9500/F9500 SERVICE PARTS LIST

ITEM #	PART #	DESCRIPTION
1	18002373	CHASSIS ASSEMBLY 9500 EXIT DEVICE LHR
1B	18002374	CHASSIS ASSEMBLY 9500 EXIT DEVICE RHR
	95015314	LIFTER ARM RHR
	95055351	LIFTER ARM LHR
2	18002353	COVER, 9500 689 BE
2	18002354	COVER, 9500 695 BD
2	18002355	COVER, 9500 696 BG
2	18002356	COVER, 9500 691 BB
2	18002357	COVER, 9500 628
2	18002358	COVER, 9500 606
2	18002359	COVER, 9500 612
2	18002360	COVER, 9500 630
2	18002361	COVER, 9500 626
2	18002362	COVER, 9500 613
2	18002363	COVER, 9500 605
2	18002364	COVER, 9500 611
2	18002365	COVER, 9500 625
3	18002220	TBAR ASSY, 9000 A 689 BE
3	18002221	TBAR ASSY, 9000 A 695 BD
3	18002222	TBAR ASSY, 9000 A 696 BG
3	18002223	TBAR ASSY, 9000 A 691 BB
3	18002224	TBAR ASSY, 9000 A 628
3	18002225	TBAR ASSY, 9000 A 606
3	18002226	TBAR ASSY, 9000 A 612
3	18002227	TBAR ASSY, 9000 A 630
3	18002228	TBAR ASSY, 9000 A 626
3	18002229	TBAR ASSY, 9000 A 613
3	18002230	TBAR ASSY, 9000 A 605
3	18002231	TBAR ASSY, 9000 A 611
3	18002232	TBAR ASSY, 9000 A 625
3	18002233	TBAR ASSY, 9000 B 689 BE

9500/F9500 SERVICE PARTS LIST

ITEM #	PART #	DESCRIPTION
3	18002234	TBAR ASSY, 9000 B 695 BD
3	18002235	TBAR ASSY, 9000 B 696 BG
3	18002236	TBAR ASSY, 9000 B 691 BB
3	18002237	TBAR ASSY, 9000 B 628
3	18002238	TBAR ASSY, 9000 B 606
3	18002239	TBAR ASSY, 9000 B 612
3	18002240	TBAR ASSY, 9000 B 630
3	18002241	TBAR ASSY, 9000 B 626
3	18002242	TBAR ASSY, 9000 B 613
3	18002243	TBAR ASSY, 9000 B 605
3	18002244	TBAR ASSY, 9000 B 611
3	18002245	TBAR ASSY, 9000 B 625
3A	18002246	TBAR ASSY, F9000 A 689 BE
3A	18002247	TBAR ASSY, F9000 A 695 BD
3A	18002248	TBAR ASSY, F9000 A 696 BG
3A	18002249	TBAR ASSY, F9000 A 691 BB
3A	18002250	TBAR ASSY, F9000 A 628
3A	18002251	TBAR ASSY, F9000 A 606
3A	18002252	TBAR ASSY, F9000 A 612
3A	18002253	TBAR ASSY, F9000 A 630
3A	18002254	TBAR ASSY, F9000 A 626
3A	18002255	TBAR ASSY, F9000 A 613
3A	18002256	TBAR ASSY, F9000 A 605
3A	18002257	TBAR ASSY, F9000 A 611
3A	18002258	TBAR ASSY, F9000 A 625
3A	18002259	TBAR ASSY, F9000 B 689 BE
3A	18002260	TBAR ASSY, F9000 B 695 BD
3A	18002261	TBAR ASSY, F9000 B 696 BG
3A	18002262	TBAR ASSY, F9000 B 691 BB
3A	18002263	TBAR ASSY, F9000 B 628
3A	18002264	TBAR ASSY, F9000 B 606
3A	18002265	TBAR ASSY, F9000 B 612
3A	18002266	TBAR ASSY, F9000 B 630
3A	18002267	TBAR ASSY, F9000 B 626
3A	18002268	TBAR ASSY, F9000 B 613

9500/F9500 SERVICE PARTS LIST

ITEM #	PART #	DESCRIPTION
3A	18002269	TBAR ASSY, F9000 B 605
3A	18002270	TBAR ASSY, F9000 B 611
3A	18002271	TBAR ASSY, F9000 B 625
4	9A	SCREW PACK ENDCAP
5	18002285	ENDCAP 9000 689 BE
5	18002286	ENDCAP 9000 695 BD
5	18002287	ENDCAP 9000 696 BG
5	18002288	ENDCAP 9000 691 BB
5	18002289	ENDCAP 9000 628
5	18002290	ENDCAP 9000 606
5	18002291	ENDCAP 9000 612
5	18002292	ENDCAP 9000 630
5	18002293	ENDCAP 9000 626
5	18002294	ENDCAP 9000 613
5	18002295	ENDCAP 9000 605
5	18002296	ENDCAP 9000 611
5	18002297	ENDCAP 9000 625
5A	18002298	ENDCAP F9000 689 BE
5A	18002299	ENDCAP F9000 695 BD
5A	18002300	ENDCAP F9000 696 BG
5A	18002301	ENDCAP F9000 691 BB
5A	18002302	ENDCAP F9000 628
5A	18002303	ENDCAP F9000 606
5A	18002304	ENDCAP F9000 612
5A	18002305	ENDCAP F9000 630
5A	18002306	ENDCAP F9000 626
5A	18002307	ENDCAP F9000 613
5A	18002308	ENDCAP F9000 605
5A	18002309	ENDCAP F9000 611
5A	18002310	ENDCAP F9000 625
6	9I	SCREW PACK 9500 689, 628, 630,626,625 BE

9500/F9500 SERVICE PARTS LIST

ITEM #	PART #	DESCRIPTION
6	9H	SCREW PACK 9500 691, 695, 613 BD BB
6	9J	SCREW PACK 9500 696, 605, 606 BG
6	9K	SCREW PACK 9500 611, 612
7	DOGKEYPAK	DOGGING KEY PACK (10 Keys Pack)
8	465	STRIKE PACK
9	9B	SCREW PACK CHASSIS MOUNTING 9500
9A	9C	SCREW PACK CHASSIS MOUNTING F9500
10	565L	STRIKE PACK OPEN BACK LHR
10	565R	STRIKE PACK OPEN BACK RHR
15	18002375	9500 MORTISE LOCK BODY 03 LHR
15	18002376	9500 MORTISE LOCK BODY 03 RHR
15	18002377	9500 MORTISE LOCK BODY 05 LHR
15	18002378	9500 MORTISE LOCK BODY 05 RHR
15	18002379	9500 MORTISE LOCK BODY 08 LHR
15	18002380	9500 MORTISE LOCK BODY 08 RHR
16	18002381	FACE PLATE PACK 626/630
16	18002382	FACE PLATE PACK 605
16	18002383	FACE PLATE PACK 606
16	18002384	FACE PLATE PACK 612
16	18002385	FACE PLATE PACK 613
	95CRKT LHR	CHASSIS KIT 9500LHR
	95CRKT RHR	CHASSIS KIT 9500RHR
	9TBRKT	REPAIR KIT TOUCHBAR
	9DRKIT	DOGGING REPAIR KIT 5000/9000
	MSKIT	MICRO SWITCH REQUEST TO EXIT KIT

9500/F9500 SERVICE PARTS LIST

ITEM #	PART #	DESCRIPTION
	CDKBEA	CYLINDER DOGGING KIT 9000 A 689 BE
	CDKBDA	CYLINDER DOGGING KIT 9000 A 695 BD
	CDKBGA	CYLINDER DOGGING KIT 9000 A 696 BG
	CDKBBA	CYLINDER DOGGING KIT 9000 A 691 BB
	CDK628A	CYLINDER DOGGING KIT 9000 A 628
	CDK606A	CYLINDER DOGGING KIT 9000 A 606
	CDK612A	CYLINDER DOGGING KIT 9000 A 612
	CDK630A	CYLINDER DOGGING KIT 9000 A 630
	CDK626A	CYLINDER DOGGING KIT 9000 A 626
	CDK613A	CYLINDER DOGGING KIT 9000 A 613
	CDK605A	CYLINDER DOGGING KIT 9000 A 605
	CDK611A	CYLINDER DOGGING KIT 9000 A 611
	CDK625A	CYLINDER DOGGING KIT 9000 A 625
	CDKBEB	CYLINDER DOGGING KIT 9000 B 689 BE
	CDKBDB	CYLINDER DOGGING KIT 9000 B 695 BD
	CDKBGB	CYLINDER DOGGING KIT 9000 B 696 BG
	CDKBBB	CYLINDER DOGGING KIT 9000 B 691 BB
	CDK628B	CYLINDER DOGGING KIT 9000 B 628
	CDK606B	CYLINDER DOGGING KIT 9000 B 606
	CDK612B	CYLINDER DOGGING KIT 9000 B 612
	CDK630B	CYLINDER DOGGING KIT 9000 B 630
	CDK626B	CYLINDER DOGGING KIT 9000 B 626
	CDK613B	CYLINDER DOGGING KIT 9000 B 613
	CDK605B	CYLINDER DOGGING KIT 9000 B 605
	CDK611B	CYLINDER DOGGING KIT 9000 B 611
	CDK625B	CYLINDER DOGGING KIT 9000 B 625
	BPABEA	BATTERY POWERED ALARM 9000 A BE
	BPABDA	BATTERY POWERED ALARM 9000 A BD
	BPABGA	BATTERY POWERED ALARM 9000 A BG
	BPABBA	BATTERY POWERED ALARM 9000 A BB
	BPA628A	BATTERY POWERED ALARM 9000 A 628
	BPA606A	BATTERY POWERED ALARM 9000 A 606
	BPA612A	BATTERY POWERED ALARM 9000 A 612

9500/F9500 SERVICE PARTS LIST

ITEM #	PART #	DESCRIPTION
	BPA630A	BATTERY POWERED ALARM 9000 A 630
	BPA626A	BATTERY POWERED ALARM 9000 A 626
	BPA613A	BATTERY POWERED ALARM 9000 A 613
	BPA605A	BATTERY POWERED ALARM 9000 A 605
	BPA611A	BATTERY POWERED ALARM 9000 A 611
	BPA625A	BATTERY POWERED ALARM 9000 A 625
	BPABEB	BATTERY POWERED ALARM 9000 B BE
	BPABDB	BATTERY POWERED ALARM 9000 B BD
	BPABGB	BATTERY POWERED ALARM 9000 B BG
	BPABBB	BATTERY POWERED ALARM 9000 B BB
	BPA628B	BATTERY POWERED ALARM 9000 B 628
	BPA606B	BATTERY POWERED ALARM 9000 B 606
	BPA612B	BATTERY POWERED ALARM 9000 B 612
	BPA630B	BATTERY POWERED ALARM 9000 B 630
	BPA626B	BATTERY POWERED ALARM 9000 B 626
	BPA613B	BATTERY POWERED ALARM 9000 B 613
	BPA605B	BATTERY POWERED ALARM 9000 B 605
	BPA611B	BATTERY POWERED ALARM 9000 B 611
	BPA625B	BATTERY POWERED ALARM 9000 B 625
	BPARBEB	BATTERY POWERED ALARM 9000 AUTO REARM A BE
	BPARBDA	BATTERY POWERED ALARM 9000 AUTO REARM A BD
	BPARBGA	BATTERY POWERED ALARM 9000 AUTO REARM A BG
	BPARBBA	BATTERY POWERED ALARM 9000 AUTO REARM A BB
	BPRA628A	BATTERY POWERED ALARM 9000 AUTO REARM A 628
	BPRA606A	BATTERY POWERED ALARM 9000 AUTO REARM A 606
	BPRA612A	BATTERY POWERED ALARM 9000 AUTO REARM A 612
	BPRA630A	BATTERY POWERED ALARM 9000 AUTO REARM A 630
	BPRA626A	BATTERY POWERED ALARM 9000 AUTO REARM A 626
	BPRA613A	BATTERY POWERED ALARM 9000 AUTO REARM A 613
	BPRA605A	BATTERY POWERED ALARM 9000 AUTO REARM A 605
	BPRA611A	BATTERY POWERED ALARM 9000 AUTO REARM A 611
	BPRA625A	BATTERY POWERED ALARM 9000 AUTO REARM A 625
	BPARBEB	BATTERY POWERED ALARM 9000 AUTO REARM B BE

9500/F9500 SERVICE PARTS LIST

ITEM #	PART #	DESCRIPTION
	BPARBDB	BATTERY POWERED ALARM 9000 AUTO REARM B BD
	BPARBGB	BATTERY POWERED ALARM 9000 AUTO REARM B BG
	BPARBBB	BATTERY POWERED ALARM 9000 AUTO REARM B BB
	BPRA628B	BATTERY POWERED ALARM 9000 AUTO REARM B 628
	BPAR606B	BATTERY POWERED ALARM 9000 AUTO REARM B 606
	BPAR612B	BATTERY POWERED ALARM 9000 AUTO REARM B 612
	BPAR630B	BATTERY POWERED ALARM 9000 AUTO REARM B 630
	BPAR626B	BATTERY POWERED ALARM 9000 AUTO REARM B 626
	BPAR613B	BATTERY POWERED ALARM 9000 AUTO REARM B 613
	BPAR605B	BATTERY POWERED ALARM 9000 AUTO REARM B 605
	BPAR611B	BATTERY POWERED ALARM 9000 AUTO REARM B 611
	BPAR625B	BATTERY POWERED ALARM 9000 AUTO REARM B 625
	469-508	BOARD TO CHANGE BPA TO DWA
	DWABEA	DIRECT WIRED ALARM 9000 A BE
	DWABDA	DIRECT WIRED ALARM 9000 A BD
	DWABGA	DIRECT WIRED ALARM 9000 A BG
	DWABBA	DIRECT WIRED ALARM 9000 A BB
	DWA628A	DIRECT WIRED ALARM 9000 A 628
	DWA606A	DIRECT WIRED ALARM 9000 A 606
	DWA612A	DIRECT WIRED ALARM 9000 A 612
	DWA630A	DIRECT WIRED ALARM 9000 A 630
	DWA626A	DIRECT WIRED ALARM 9000 A 626
	DWA613A	DIRECT WIRED ALARM 9000 A 613
	DWA605A	DIRECT WIRED ALARM 9000 A 605
	DWA611A	DIRECT WIRED ALARM 9000 A 611
	DWA625A	DIRECT WIRED ALARM 9000 A 625
	DWABEB	DIRECT WIRED ALARM 9000 B BE
	DWABDB	DIRECT WIRED ALARM 9000 B BD
	DWABGB	DIRECT WIRED ALARM 9000 B BG
	DWABBB	DIRECT WIRED ALARM 9000 B BB
	DWA628B	DIRECT WIRED ALARM 9000 B 628
	DWA606B	DIRECT WIRED ALARM 9000 B 606
	DWA612B	DIRECT WIRED ALARM 9000 B 612

9500/F9500 SERVICE PARTS LIST

ITEM #	PART #	DESCRIPTION
	DWA630B	DIRECT WIRED ALARM 9000 B 630
	DWA626B	DIRECT WIRED ALARM 9000 B 626
	DWA613B	DIRECT WIRED ALARM 9000 B 613
	DWA605B	DIRECT WIRED ALARM 9000 B 605
	DWA611B	DIRECT WIRED ALARM 9000 B 611
	DWA625B	DIRECT WIRED ALARM 9000 B 625