SA ABLOY

COMMERCIAL THRESHOLD

Applies to the following thresholds: 151, 270, 271, 272, 276, 2748, 274X4, 2746X6, 2749, 2750, 170, 175, 175SS, 154, 154SS, 171, 172, 176, 2548, 254X4, 2549, 2550, 255X5, 256X6, 273, 274, 2746, 168, 252, 253, 254, 255, 256, 227, 229, 158, 2727, 190, 191, 192, 193, 228, 2286, 19125, 19325

Testing/Ratings:




Gasketing material for fire doors intended for application to listed steel frames and/or classified steel covered composite type, and hollow metal type fire doors rated up to 3 hours; wood and plastic covered composite type fire doors rated up to 1-1/2 hours; and wood core type fire doors rated up to 20 minutes. (Thresholds may or may not contain gasketing material).

Tools Required:



Installation Instructions:

Top (plan) view of door opening (out-swing type) exterior

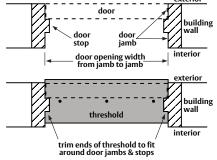

- 1. Measure width of door opening from jamb to jamb and stop to stop and mark ends of threshold for trimming.
- 2. Trim ends of threshold to fit around door jambs and stops.
- 3. Drill pilot holes in floor through pre-drilled holes in threshold.
- 4. Caulk ends of threshold, and under full length of legs (important for effective sealing and moisture control).
- 5. Secure threshold to floor with supplied screws. (When fastening to concrete, use anchors; anchors not included.)

www.pemko.com

© 2014 Pemko Manufacturing Co. CT4_WEBINS Rev 2 - 11.17.14