

COMMERCIAL THRESHOLD


Applies to the following thresholds: **236, 2364, 2366**

Testing/Ratings:




Barrier-free
over carpet.

Tools Required:



Installation Instructions:

Top (plan) view of door opening (out-swing type)

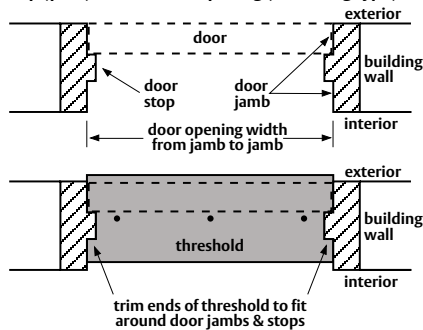

1. Carefully cope to fit within the frame opening.
2. Use a sealant or compound at all edges and joints.
3. Fasten with screws provided.