

# COMMERCIAL THRESHOLD


Applies to the following thresholds:

173, 169, 1700, 166, 273X3\_FG, 273X4\_FG, 274X4\_FG,  
2746x6\_FG, 255X5\_FG, 256X6\_FG, 252X2\_FG, 252X3\_FG,  
253X3\_FG, 253X4\_FG, 254X4\_FG, 254X5\_FG

## Testing/Ratings:




## Tools Required:



## Installation Instructions:

Top (plan) view of door opening (out-swing type)

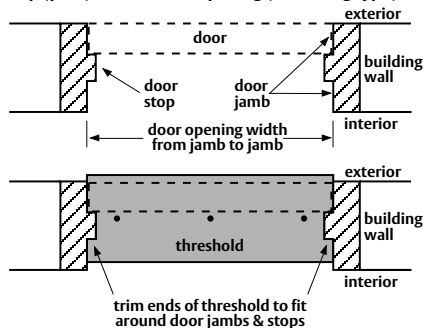

1. Measure width of door opening from jamb to jamb and stop to stop and mark ends of threshold for trimming.
2. Trim ends of threshold to fit around door jambs and stops.
3. Drill pilot holes in floor through pre-drilled holes in threshold.
4. Caulk ends of threshold, and under full length of legs (important for effective sealing and moisture control).
5. Secure threshold to floor with supplied screws. (When fastening to concrete, use anchors; anchors not included.)