

Installation Instructions

For Models:

Model Number / Description File Name B-352.pdf

B-282 25 ClassicSeries® Surface-Mounted Sanitary Napkin/Tampon Vendor

INSTRUCTIONS FOR INSTALLATION AND MAINTENANCE


BOBRICK NAPKIN AND TAMPON VENDORS, (SERIES F)

REPLACEMENT PARTS LIST

Part Name	Part No.
Dual Mechanism 25¢	282-213
Napkin Mechanism 25¢	282-223
Tampon Mechanism 25¢	282-227
Tampon Rotor	352-15
Key for Door	330-43
Napkin Coin Label 25¢	352-110N
Tampon Coin Label 25¢	352-110T
Lock & Key for Coin Box	352-111
Key for Coin Box	352-112
Napkin Weight	352-113
Mechanism Handle with Setscrew	282-114
Coin Box Cover with Lock & Key	352-203
Tampon Weight	352-314

Recommended Mounting Height Off Floor

73" to 77" (1855 to 1955mm) to top of rough wall opening For barrier-free design 59-1/2" (1510mm)

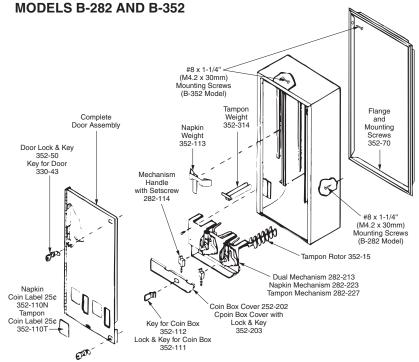

Model B-352 Shown

INSTALLATION:

Surface-Mounted Model B-282 Only

Secure vendor to wood studs or metal wall with four #8 x 1-1/4" (M4.2 x 30mm) pan-head sheet-metal screws furnished, through mounting holes in back of cabinet. For solid walls, use #8 fiber plugs or 1/8" (3mm) expansion bolts. For hollow walls, use anchor nuts with machine screws.

Recessed Model B-352 Only

- 1. Remove flange (Part No. 352-70) from vendor and insert flange into front of rough wall opening. NOTE: If necessary, place wooden shims at screw holes between flange and rough wall opening to prevent distortion of flange.
- 2. Secure flange to side framing of rough wall opening with four #8 x 1-1/4" (M4.2 x 30mm) flat-head sheet-metal screws furnished, *making certain screw heads do not project above countersunk holes*.
- 3. Insert vendor into rough wall opening until vendor fills depth of rough wall opening or until face of vendor is flush with flange.
- 4. Secure vendor to framing of rough wall opening with four #8 x 1-1/4" (M4.2 x 30mm) flat-head sheet-metal screws furnished, through mounting holes located in top and bottom of vendor cabinet. NOTE: If necessary, place wooden shims at screw holes between cabinet and framing to prevent distortion of cabinet.

MAINTENANCE:

To Load Napkins

- 1. Remove weight (Part No. 352-113) from the center track of vendor.
- 2. Insert 15 napkin packages, measuring between 2-7/8" x 3/4" to 3-1/8" x 1-1/8" x 4-3/8" maximum (73 x 19 x 105 to 80 x 29 x 111mm) into each channel. These include Kotex 707, Guards No. 147, Pure-Nap No. 606-M4, and Modess No. 4 (see Bobrick, Advisory Bulletin TB-25).
- 3. Replace weight on top of napkins in both channels by sliding over the center track.

To Load Tampons

- 1. Remove weight (Part No. 352-314) from single channel at right side of vendor.
- 2. Insert 27 tampons, measuring between 4-5/8" long x 9/16" diameter minimum to 5-1/8" long x 3/4" diameter maximum (118 x 14 to 130 x 19mm) into single channel. These include Kotex No. 1462, Tampax, and Meds.
- 3. Replace weight on top of tampons by sliding over tampon track.

To Dispense Napkin or Tampon

- 1. Insert coin in coin slot, turn handle clockwise as far as it will go and release.
- 2. When *all* napkins or tampons have been dispensed, the napkin weight or tampon weight actuates the *empty* indicator which blocks the coin slot and prevents another coin from being inserted.

If Vendor Fails to Work Properly, make sure that:

- 1. Machine is loaded with correct size napkins and tampons.
- 2. Damaged napkins or tampons are not jamming mechanism.
- 3. Weights are in place on top of napkins and tampons.
- 4. Napkin support plates (the 4" (100mm) fingers that napkin boxes rest on) are in straight, horizontal position.
- 5. Tampon rotor (Part No. 352-15) is properly installed with the round shaft inserted in the slot, with pocket rotor in *up* position.
- 6. Coin box is not full.

To Replace Complete Dual Mechanism

- 1. Order complete dual mechanisms for 25¢ coin denomination.
- 2. Remove napkins, tampons, and weights from vendor.
- 3. Remove complete dual mechanism by unscrewing four #8-32 x 1/4" (M4.2 x 6mm) pan-head screws.
- 4. Install new complete dual mechanism with the same screws.
- 5. Install new coin plates by removing paper backing and applying with pressure, if replacing.

To Replace Individual Napkin and Tampon Mechanisms

- 1. Order individual napkin or tampon mechanisms for 25¢ coin denomination.
- 2. Full instructions for replacement of individual napkin and tampon mechanisms will be included with shipment.

To Remove Door

- 1. Unlock and open door.
- 2. Use nail or similar object to push hinge pin out of hinge knuckle and use pliers to pull hinge pin out.

In the U.S.A.: BOBRICK WASHROOM EQUIPMENT, INC.

200 Commerce Drive, Clifton Park, New York 12065-1350 • Tel: (518) 877-7444 • FAX: 518-877-5029 11611 Hart Street, North Hollywood, California 91605-5882 • Tel: (818) 982-9600 • FAX: 818-503-1102 100 Bobrick Drive, Jackson, Tennessee 38301-5625 • Tel: (731) 424-7000 • FAX: 731-424-7800



45 Rolark Drive, Scarborough, Ontario M1R 3B1 • Tel: (416) 298-1611 • FAX: 416-298-6351

