


BR2-900

2 Relay Logic Module
with Built-In 900 MHz
Wireless Technology




(US version)

DESCRIPTION

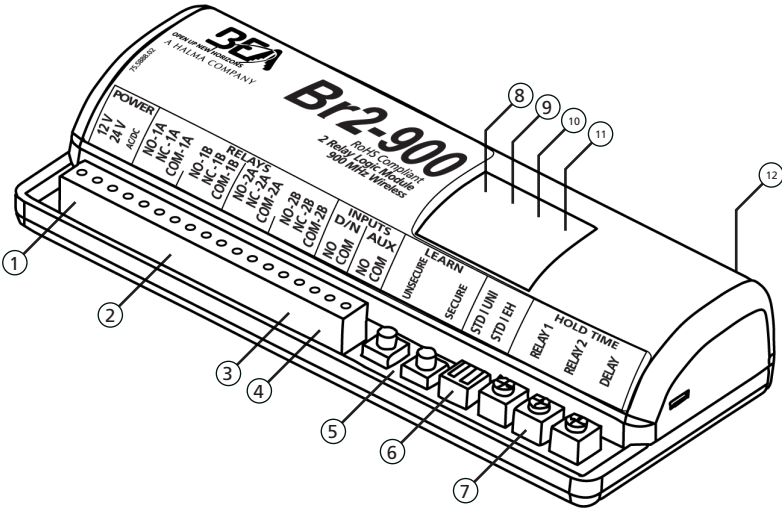


- | | | |
|--------------------|------------------------------|-----------------------------------|
| 1. Power input | 5. Learn buttons | 9. Relay 2 LED (white) |
| 2. Relay outputs | 6. DIP-switches | 10. Relay 1 LED (blue) |
| 3. Day/Night input | 7. Potentiometers | 11. Tri-color signal strength LED |
| 4. AUX input | 8. Radio frequency LED (red) | 12. Antenna |


HAND-HELD TRANSMITTERS

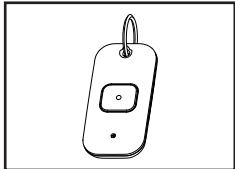


10TD900HH1: 1-button transmitter

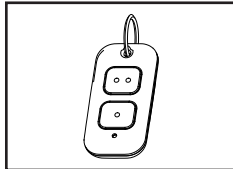


10TD900HH2: 2-button transmitter

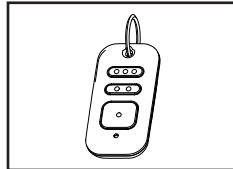


10TD900HH3: 3-button transmitter

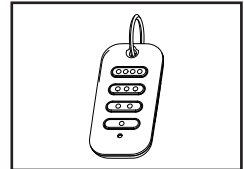


10TD900HH4: 4-button transmitter

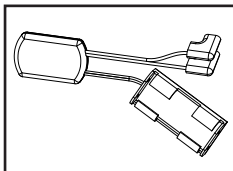

10TD900PB: Push Plate transmitter

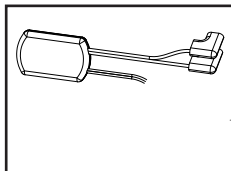

10TD900TR: Touchless Retrofit transmitter

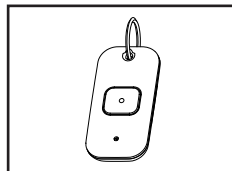

10TD900HH1U: 1-button Universal transmitter

- The device should not be used for purposes other than its intended use. All other uses cannot be guaranteed by the manufacturer of the sensor.
- The installer of the door system is responsible for carrying out a risk assessment and installing the sensor and the door system in compliance with applicable national and international regulations and standards on door safety.
- The manufacturer of the sensor cannot be held responsible for incorrect installations or inappropriate adjustments of the sensor.

PRECAUTIONS




CAUTION

- ❑ Shut off all power going to header before attempting any wiring procedures.
- ❑ Maintain a clean and safe environment when working in public areas.
- ❑ Constantly be aware of pedestrian traffic around the door area.
- ❑ Always stop pedestrian traffic through the doorway when performing tests that may result in unexpected reactions by the door.
- ❑ ESD (electrostatic discharge): Circuit boards are vulnerable to damage by electrostatic discharge. Before handling any board, ensure you dissipate your body's ESD charge.
- ❑ Always check placement of all wiring before powering up to ensure that moving door parts will not catch any wires and cause damage to equipment.
- ❑ Ensure compliance with all applicable safety standards (e.g. ANSI A156.10) upon completion of installation.
- ❑ DO NOT attempt any internal repair of the components. All repairs and/or component replacements must be performed by BEA, Inc. Unauthorized disassembly or repair may:
 1. jeopardize personal safety and may expose one to the risk of electrical shock.
 2. adversely affect the safe and reliable performance of the product resulting in a voided warranty.

INSTALLATION

Wiring

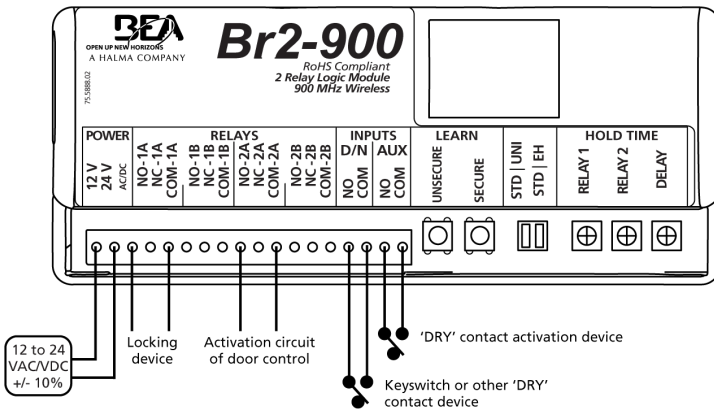

Relays 1 and 2 are DPDT: relays **1A and 1B** fire simultaneously and relays **2A and 2B** fire simultaneously.

Relays **1B and 2B** are commonly used in applications with two (2) locking devices and/or with two (2) independent door controls.

INPUT D/N (DAY/NIGHT mode)

when open, allows transmitters learned in both SECURE mode and UNSECURE mode to function
when closed, only allows transmitters learned in UNSECURE mode to function

INPUT AUX functions regardless of learn, DIP switch, or potentiometer settings.

USER INTERFACE

DIP-Switches

DIP switches can be set to achieve desired functionality based upon specific application requirements.

| DIP | STATUS | FUNCTION | DESCRIPTION |
|-----|------------------|-----------------------------|--|
| 1 | STD | standard mode | allows only learned/programmed transmitters to function |
| | UNI ¹ | universal mode ² | allows learned/programmed and "universal transmitters" to function |
| 2 | STD | standard mode | pressing/holding or pressing/releasing transmitter activates and holds relay according to HOLD TIME POTs (single shot) |
| | EH | extended hold | pressing/holding transmitter holds relay as long as transmitter is pressed/ held – once released, relay acts according to HOLD TIME POTs |

NOTES:

1. Day/Night mode does not function when DIP-switch 1 is set to UNI.
2. See Universal Mode in SET-UP section (page 5).

Learn Buttons

900 MHz wireless transmitters can be programmed (or "learned") as either UNSECURE or SECURE transmitters. Any combination of up to 75 transmitters may be programmed.

| BUTTON | FUNCTION | DESCRIPTION |
|----------|-----------------------|--|
| UNSECURE | unsecure transmitters | learned transmitter functions when INPUT D/N is open or closed |
| SECURE | secure transmitters | learned transmitter only functions when INPUT D/N is open |

Potentiometers

Potentiometers control output relay functionality.


| POT | FUNCTION | DESCRIPTION |
|--------|-----------------------------------|------------------|
| HOLD 1 | relay 1 hold time | 0.5 – 10 seconds |
| HOLD 2 | relay 2 hold time | 0.5 – 10 seconds |
| DELAY | delay between relay 1 and relay 2 | 0 – 3 seconds |

Signal Strength Indicator


Pressing and holding transmitter button for three (3) seconds activates signal strength LED on Br2-900.

| LED COLOR | DESCRIPTION |
|-----------|---------------------------------|
| GREEN | strong wireless signal |
| YELLOW | moderate wireless signal |
| RED | weak wireless signal |


Hand-Held Configuration

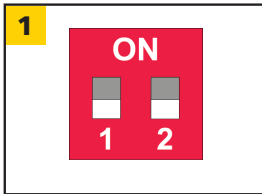


Set DIP-switches as desired.
For DIP-switch settings, please refer to table on page 3 (USER INTERFACE).

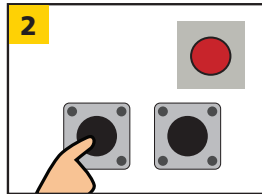

Press and release desired learn button (red LED on Br2-900 will illuminate).

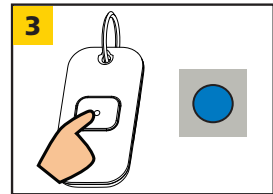


Press transmitter twice (white and blue LEDs on receiver will illuminate).

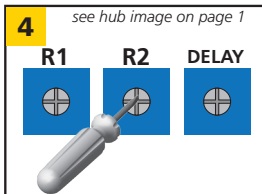


Adjust POTs as desired.
See page 3 for descriptions ("Potentiometers").


Push Plate Configuration

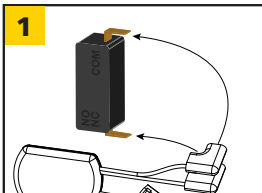

Connect transmitter¹ to push plate (NO & COM) and insert into box.

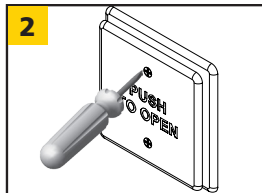

Install push plate.

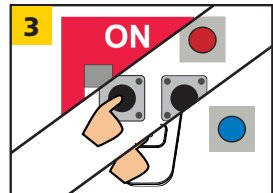

Follow steps 1 – 4 in Hand-Held Configuration.

NOTES:

1. 10TD900PB required for push plates.

Universal Mode

Universal transmitters (10TD900HH1U) do not need programmed (or "learned") to the Br2-900. Their unique serial number is automatically recognized by the Br2-900.

During the Hand-Held Configuration or the Push Plate Configuration steps (above), standard transmitters must be programmed/learned as either "Secure" or "Unsecure" transmitters. When set to Universal, learned, standard transmitters will function as programmed/learned.

SET-UP (CONT.)


Vestibule Configuration

Vestibule applications may be installed and programmed so that either door 1 and door 2 **open simultaneously** or door 1 opens **first** and door 2 **opens after a delay** (set by HOLD TIME potentiometers).

For 2-way traffic, two (2) BR2-900 modules are required.


1-Way Traffic (simultaneous)

Door 1 and Door 2 will open simultaneously.

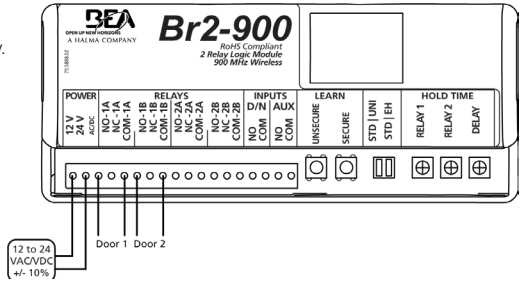


1-Way Traffic (lock + simultaneous)

Lock(s) will unlock and then Door 1 and Door 2 will open simultaneously.

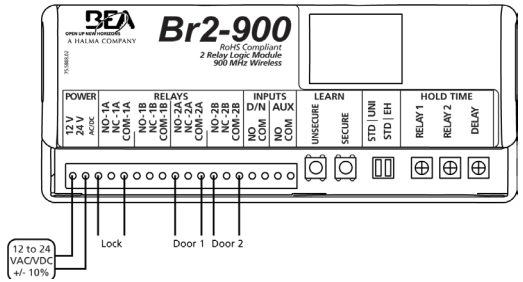


1-Way Traffic (sequence)


Door 1 will open and then Door 2 will open after a delay set by DELAY POT.

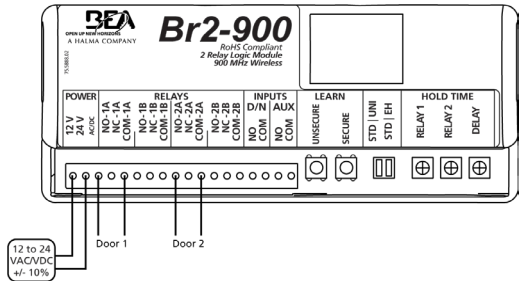

2-Way Traffic

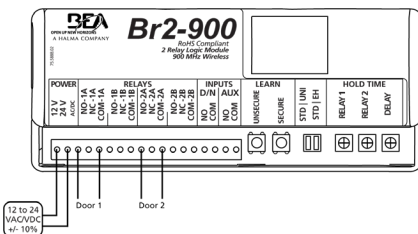


Door 1 will open and then Door 2 will open after a delay set by DELAY POT.

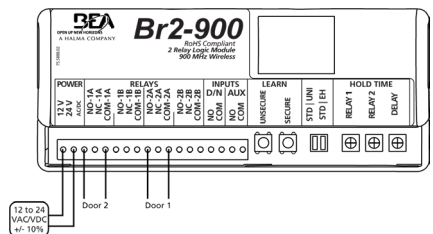


Door 2 will open and then Door 1 will open after a delay set by DELAY POT.

REMOVING TRANSMITTERS

Single Transmitter

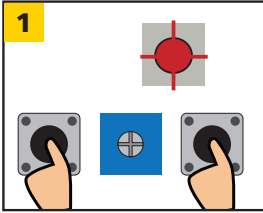


Press BOTH learn buttons until red LED flashes once (~2 s).

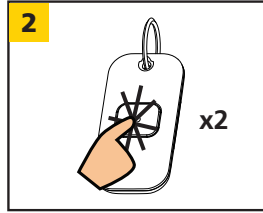

Press transmitter TWICE within 10 seconds.


All Transmitters

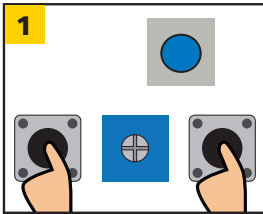


Press BOTH learn buttons until blue LED illuminates (~10 s).

BATTERY REPLACEMENT

Hand-held (TD900HHx)

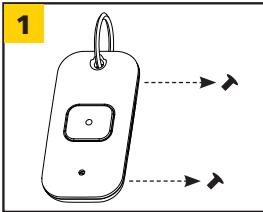


Remove back screws and disassemble.

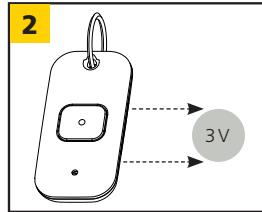

Replace 3 volt (CR2032) battery observing polarity and reassemble.

Push Plate (TD900PB)

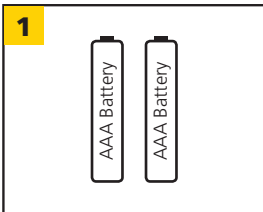

Replace 2 AAA batteries observing polarity.

Low Battery Indicator: After transmitter button is pressed, low battery is indicated by three (3) transmitter red LED blinks.



| | | |
|---|---------------------------|--|
| Br2-900 will not react to any inputs | Incorrect power | Verify power supply of 12 – 24 VAC/VDC +/-10% is wired to correct terminals |
| | Not programmed | Ensure a Br2-900 is programmed with wireless transmitter |
| | Incorrect wiring | Verify wiring |
| | Defective Br2-900 | Replace Br2-900 |
| Br2-900 has no output | Incorrect output devices | Ensure proper devices are connected to outputs |
| | Incorrect wiring | Verify wiring |
| | Incorrect settings | Verify programming and potentiometer settings |
| | Defective Br2-900 | Replace Br2-900 |
| Red LED on receiver flickering; unable to program | Push Plate is stuck | Disconnect push plates to determine which one is stuck (LED should go out) |
| | Faulty transmitter | If LED does not go out, remove transmitter batteries to determine which is faulty, replace transmitter |
| Weak signal | Antenna positioned poorly | Position antenna outside of door header |

TECHNICAL SPECIFICATIONS

| | |
|--|---|
| Supply Voltage | 12 – 24 VAC / VDC \pm 10% |
| Current Consumption | 45 mA DC 75 mA AC |
| Frequency | 908 – 918 MHz (frequency hopping) |
| Emitted radio power | -25 dBm (TX) |
| Power consumption | 0.5 – 1.5 W |
| Programmable transmitters per receiver | 75 |
| Temperature Rating | -22 °F – 158 °F (-30 °C – 70 °C) |
| Input | |
| Day / Night (24hr) | DRY contact |
| AUX | DRY contact |
| Contact Rating | |
| Relay 1 DPDT / Relay 2 DPDT | 2 A @ 30 VDC or 2 A @ 24 VAC |
| LEDs | blue (relay 1 activation) white (relay 2 activation) red (radio frequency / learn) tri-color (signal strength) |
| Certification | FCC, IC |
| Dimensions | 5.2" (W) x 1" (H) x 2.2" (D) (133 mm x 25 mm x 55 mm) |
| Housing | ABS (white translucent) |

*Specifications are subject to change without prior notice.
All values measured in specific conditions.*

FCC / IC

"This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

Changes or modifications not expressly approved by BEA Incorporated could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

| | | |
|---------------------------|-----------------------|--------------------|
| FCC ID: 2ABWS-10BR2900 | IC: 4680A-10BR2900 | MODEL: 10BR2900 |
| FCC ID: 2ABWS-10TD900PB | IC: 4680A-10TD900PB | MODEL: 10TD900PB |
| FCC ID: 2ABWS-10TD900HH4 | IC: 4680A-10TD900HH4 | MODEL: 10TD900HH1 |
| FCC ID: 2ABWS-10TD900HH4 | IC: 4680A-10TD900HH4 | MODEL: 10TD900HH2 |
| FCC ID: 2ABWS-10TD900HH4 | IC: 4680A-10TD900HH4 | MODEL: 10TD900HH3 |
| FCC ID: 2ABWS-10TD900HH4 | IC: 4680A-10TD900HH4 | MODEL: 10TD900HH4 |
| FCC ID: 2ABWS-10TD900HH1U | IC: 4680A-10TD900HH1U | MODEL: 10TD900HH1U |

ANSI / AAADM Compliance



Upon completion of the installation or service work, at a minimum, perform a daily safety check in accordance with the minimum inspection guidelines provided by AAADM. Provide each equipment owner with an owner's manual that includes a daily safety checklist and contains, at a minimum, the information recommended by AAADM. Offer an information session with the equipment owner explaining how to perform daily inspections and point out the location of power/operation switches to disable the equipment if a compliance issue is noted. The equipment should be inspected annually in accordance with the minimum inspection guidelines. A safety check that includes, at a minimum, the items listed on the safety information label must be performed during each service call. If you are not an AAADM certified inspector, BEA strongly recommends you have an AAADM certified inspector perform an AAADM inspection and place a valid inspection sticker below the safety information label prior to putting the equipment into operation.

